


# BOTTLE REFILL INSTRUCTIONS



THE BOTTLES MUST BE REFILLED WHEN THEY ARE ABOUT 1/4 OF AN INCH BELOW THE LARGE FILL PLUG.

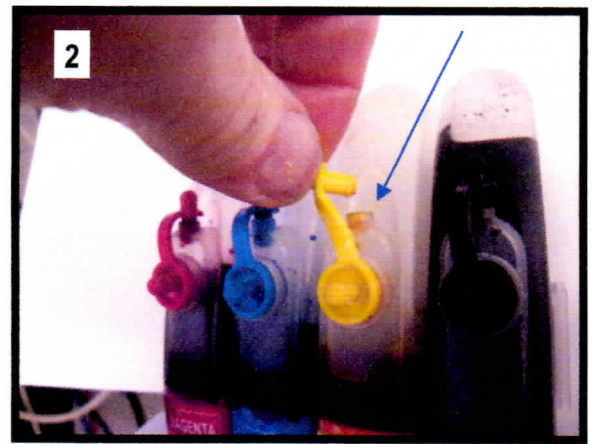

THE FIRST THING BEFORE REFILLING THE BOTTLES IS TO **MAKE SURE** THAT YOU PUT THE SMALL VENT-PLUGS BACK INTO THE VENT HOLES.



NEXT LAY THE BOTTLES FLAT DOWN AS SEEN IN PHOTO 3.



NOW OPEN THE LARGE PLUGS, HAVE SOME PAPER TOWEL ON HAND SO YOU CAN OPEN THE PLUGS WITHOUT GETTING INK ON YOUR FINGERS.



1. NOW SLOWLY FILL BOTTLES ONE AT A TIME. **CAUTION** DO NOT FEED THE INK INTO THE BOTTLES TOO QUICKLY BECAUSE THIS CAN CAUSE INK TO BACK UP AND SPILL OUT.
2. **NOTE:** WE FOUND BY USING THE BARREL OF AN OLD PEN THAT IT MAKES A GREAT TOOL FOR INSTALLING THE LARGE PLUGS BACK INTO THE INK BOTTLE
3. AFTER THE BOTTLES ARE FILLED STAND THE BOTTLES UPRIGHT AND REMOVE THE SMALL TOP VENT PLUGS SO AIR CAN ENTER THE BOTTLES. **THIS IS VERY IMPORTANT!**

**IMPORTANT: INK TANK MUST REMAIN NEXT TO THE PRINTER  
( NEVER HIGHER OR LOWER THEN THE PRINTER OR YOU WILL FLOOD THE PRINTER. )**